

CATWALK® / DOGWALK® GLASS FITTING · SPARE PART INSTALLATION

Replacing the Flap on Your Glass Fitting Maxi Pet Door

The **G-SDDRF** replacement flap fits the glass fitting maxi (small dog) door range below. Before starting, carefully inspect your pet door and familiarise yourself with the components shown.

DOOR MODEL	REPLACEMENT FLAP MODEL
G-SDDC — Maxi Dual Glaze, Clear	G-SDDRF
G-SDDW — Maxi Dual Glaze, White	G-SDDRF
G-Sddb — Maxi Dual Glaze, Black	G-SDDRF
G-SDDSLC — Maxi Slim Line, Clear	G-SDDRF
G-SDDSLW — Maxi Slim Line, White	G-SDDRF

REPLACEMENT FLAP

G-SDDRF

Barcode (GTIN-13): 09421006250069



9421006250069

WHAT'S IN THE KIT



Spare Flap

UV-stabilised polycarbonate — the same material used in aircraft windows



Magnet

Press-fits into the recess at the base of the flap

Before you begin

Inspect the pet door and locate the hinge plate at the top of the flap, then identify the cover panel that conceals the screws. Have the replacement flap and magnet ready. You can replace the flap without removing the door from its installed position — or remove the whole unit first (see Option 2).

Option 1 — Replace the Flap Only (door stays installed)

STEP 1 Remove the Hinge Cover

- Locate the hinge cover at the top of the flap.

- Carefully remove the cover to expose the fixing screws — use a flat tool if required, taking care not to damage the cover.

STEP 2 Remove the Cover Caps

- Locate the three cover caps on the hinge plate (top of the flap).
- Using a flat knife or similar tool, gently flick off the caps to expose the screws underneath.

STEP 3 Remove the Hinge Plate

- Unscrew the three fixing screws located under the cover.
- Remove the hinge plate and the existing flap.

STEP 4 Prepare the New Flap — Install the Magnet

- Place the supplied magnet on top of the magnet in the base of your pet door to confirm a connecting polarity — in the wrong position the magnets will repel each other.
- Once you have identified the correct position, press the magnet into the recess at the base of the flap.

IMPORTANT — check magnet orientation before pressing in

The new magnet must attract the magnet in the door frame. Hold it against the frame magnet and make sure it pulls toward it, not away. Only then press it firmly into the flap.

Once fully inserted, the magnet cannot be removed.

STEP 5 Install the New Flap

- Position the new flap into the door frame.
- Place the hinge plate over the flap.
- Reinsert and tighten the three screws.

STEP 6 Replace the Cover Caps

- Snap the cover caps back over the screws.

STEP 7 Test the Flap

- Open and release the flap several times.
- Check that it swings freely and closes securely using the magnet.

Option 2 — Remove the Whole Unit First (glass installations)

If you prefer, the complete door unit can be taken out of the glass panel before replacing the flap.

STEP 1 Remove the Door

- Carefully lift the door unit out of the glass panel, taking care when working near glass.

STEP 2 Replace the Flap

- Follow Option 1, Steps 1–6 above to fit the new flap.

STEP 3 Refit the Door

- Refit the door unit in the glass panel, then test the flap again before use.

Maintenance Tips

- Clean the flap regularly with a soft cloth.
- Check magnet alignment periodically.
- Replace the flap if worn or damaged to maintain performance.

✓ **Your replacement flap is now installed and ready for use.** Genuine Pet-Tek spare parts keep your door performing to its 3-year manufacturer's warranty standard.