

CATWALK® / DOGWALK® WOOD FITTING · SPARE PART INSTALLATION

Replacing the Flap on Your Wood Fitting Small Dog Door

 
The **W-SDDRF** replacement flap fits the wood fitting small dog door range below. Before starting, carefully inspect your pet door and familiarise yourself with the components shown.

DOOR MODEL	REPLACEMENT FLAP MODEL
W-SDDW — Small Dog Door, White	W-SDDRF
W-SDDB — Small Dog Door, Brown	W-SDDRF
W-SDDTW — Small Dog Door Tunnel, White	W-SDDRF
W-SDDTB — Small Dog Door Tunnel, Brown	W-SDDRF

REPLACEMENT FLAP

W-SDDRF

Barcode (GTIN-13): 09421006250441



9421006250441

WHAT'S IN THE KIT



Spare Flap

UV-stabilised polycarbonate — the same material used in aircraft windows



Magnet

Press-fits into the recess at the base of the flap

How this flap system works

This model uses a side-locking flap system — there is no hinge plate. The flap is secured into the frame from both sides rather than with screws across the top. If you prefer, the whole unit can be removed from the wooden panel first (see Option 2).

Option 1 — Replace the Flap Only (door stays installed)

STEP 1 Inspect the Door

- Open the door and examine how the existing flap is held in place.
- Note the side retention channels / clips that hold the flap.

STEP 2 Remove the Existing Flap

- Gently flex or slide the flap to release it from one side of the frame.
- Carefully disengage the opposite side and remove the flap completely.
- Take care not to damage the frame when removing the flap.

STEP 3 Prepare the New Flap — Install the Magnet

- Place the supplied magnet on top of the magnet in the base of your pet door to confirm a connecting polarity — in the wrong position the magnets will repel each other.
- Once you have identified the correct position, press the magnet into the recess at the base of the flap.

IMPORTANT — check magnet orientation before pressing in

The new magnet must attract the magnet in the door frame. Hold it against the frame magnet and make sure it pulls toward it, not away. Only then press it firmly into the flap.

Once fully inserted, the magnet cannot be removed.

STEP 4 Install the New Flap

- Insert one side of the flap into the frame channel.
- Gently flex the flap and guide the opposite side into position.
- Ensure both sides are securely seated — the flap is held firmly in place without screws.

STEP 5 Test the Flap

- Open and release the flap several times.
- Check that it swings freely and sits evenly in the frame.
- Check that the magnet pulls the flap closed securely.

Option 2 — Remove the Whole Unit First (wood installations)

If you prefer, the complete door unit can be taken out of the wooden panel before replacing the flap.

STEP 1 Remove the Door

- Carefully lift the door unit out of the wooden panel.

STEP 2 Replace the Flap

- Follow Option 1, Steps 2–5 above to fit the new flap.

STEP 3 Refit the Door

- Refit the door unit in the wooden panel, then test the flap again before use.

Maintenance Tips

- Clean the flap regularly with a soft cloth.
- Check magnet alignment periodically.
- Replace the flap if worn or damaged to maintain performance.

✓ **Your replacement flap is now installed and ready for use.** Genuine Pet-Tek spare parts keep your door performing to its 3-year manufacturer's warranty standard.