

DOGWALK® GLASS FITTING · SPARE PART INSTALLATION


Replacing the Locking Dial on Your Glass Fitting Dog & Intermediate Dog Doors

This guide covers replacing the 4-way locking dial on the Dogwalk® glass fitting dog door and intermediate dog door ranges. Before starting, carefully inspect your pet door, read through all steps in full, and familiarise yourself with the components shown.

DOOR MODEL	LOCKING DIAL COLOUR
G-DDC — Dog Door, Clear	Clear
G-DDW — Dog Door, White	White
G-DDB — Dog Door, Black	Grey
G-DDSLC — Dog Door Slim Line, Clear	Clear
G-DDSLW — Dog Door Slim Line, White	White
G-IDDC — Intermediate, Clear	Clear
G-IDDW — Intermediate, White	White
G-IDDB — Intermediate, Black	Grey
G-IDDSLC — Intermediate Slim Line, Clear	Clear
G-IDDSLW — Intermediate Slim Line, White	White

REPLACEMENT DIAL SETS

DIAL SET	BARCODE (GTIN-13)
G-LDDDC Clear dial set	09421006250137  9421006250137
G-LDDDW White dial set	09421006250199  9421006250199
G-LDDDG Grey dial set	—

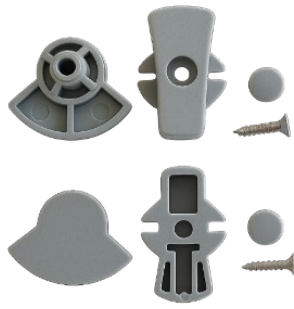

The locking dial assembly

How the locking dial works

The locking dial assembly consists of two parts that connect through the door frame. They are secured together with a fixing screw, which is then concealed with a cover cap.

Preparation — Remove the Pet Door

For safety — particularly when working with glass — it is strongly recommended that the pet door is removed from its installation before proceeding.

- Remove the four screw caps and the screws securing the pet door.
- Carefully separate the door into two sections — the inner frame from inside the house, and the outer frame from outside.
- Gently lift both sections away from the glass.

Tip: having a second person assist during removal will make the process safer and easier.

Removing a Broken Locking Dial

STEP 1 Remove the Cover Cap

- Carefully pry off or lift the cover cap to expose the fixing screw underneath.

STEP 2 Unscrew the Fixing Screw

- Using an appropriate screwdriver, loosen and remove the fixing screw that secures the interior and exterior sections together.

STEP 3 Separate the Dial Sections

- Once the screw is removed, gently pull apart the interior and exterior sections of the locking dial from either side of the door.


If the lock is damaged and difficult to separate, apply gentle wiggling while pulling both sides apart. Avoid excessive force to prevent damaging the door frame.

Locking Dial Components

Exterior — fitted to the outside of the house



Interior — fitted to the inside of the house

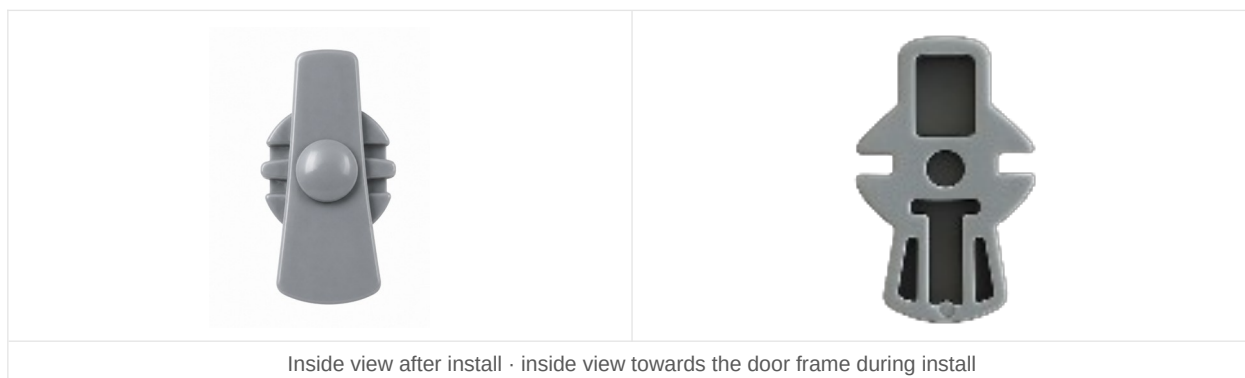

How to Install the New Dial

STEP 1 Connect the Dial Sections

- Align and connect the interior section with the exterior section through the door frame using the fixing screws provided.

STEP 2 Secure with the Fixing Screw

- Insert and tighten the fixing screw to firmly secure both sections together.

STEP 3 Attach the Cover Cap

- Place the cover cap over the screw to conceal it and complete the installation.



Dial Positions After Install

Fully open position



Inside and outside views — fully open

Fully locked position



Inside and outside views — fully locked

A correctly installed locking dial clicks positively into its 4 locking positions. If any spinning occurs, the fixing screw needs further tightening. The cover cap goes over the screw head — this completes the new locking dial.

Final Step — Refit the Door

Put your pet door back into position and screw it into place. Screws should be tightened so the pet door is held firmly — but not overtightened, as this risks causing a run in your glass.

✓ **Your new locking dial is installed and ready for use.** Genuine Pet-Tek spare parts keep your door performing to its 3-year manufacturer's warranty standard.