

Replacing Flap for Glass Door

Door Model	Flap Model
W-SDDW	G-SDDRF
W-Sddb	G-SDDRF
W-SDDTW	G-SDDRF
W-SDDTB	G-SDDRF

Before starting, carefully inspect your pet door and familiarise yourself with the components shown below.



Spare Flap



Magnet

This model uses a side-locking flap system (no hinge plate). The flap is secured into the frame from both sides, rather than with screws across the top. However, if your door is installed in glass, you may choose to remove the entire unit first.

Option 1: Replacing the Flap Only (Door Stays Installed)

Step 1: Inspect the Door

Open the cat door and examine how the existing flap is held in place. Note the side retention channels/clips that hold the flap.

Step 2: Remove the Existing Flap

- Gently flex or slide the flap to release it from one side of the frame.
- Carefully disengage the opposite side.
- Remove the flap completely from the door.

Take care not to damage the frame when removing the flap.

Step 3: Prepare the New Flap

INSTALLING MAGNET INTO FLAP

- Place the magnet supplied on top of the magnet in the base of your pet door to ensure you have a connecting polarity. If not in the correct position the magnets will repel each other.
- Once you have identified the correct magnetic position you may press the magnet into place in the recess at the base of the flap.
- Double check before you press the magnet all the way into the flap. Once in place it cannot be removed.

Important: Correct Magnet Orientation

- The magnet must attract the magnet in the door frame
- To check:
 - Place the new magnet against the frame magnet
 - Ensure it pulls toward it (not repels)
 - Once confirmed, press the magnet firmly into the flap.

Note: The magnet cannot be removed once fully inserted

Step 4: Install the New Flap

- Insert one side of the flap into the frame channel.
- Gently flex the flap and guide the opposite side into position.
- Ensure both sides are securely seated in the frame.
- The flap should now be held firmly in place without screws.

Step 5: Test the Flap

- Open and release the flap several times.
- Check that:
 - The flap moves freely
 - It sits evenly in the frame
 - The magnet pulls the flap closed securely

Step 6: Test the Flap

Open and release the flap several times.

Check that: It swings freely & it closes securely using the magnet

Option 2: Removing the Entire Door (Optional for Wood Installations)

Step 2: Remove the Door

Carefully lift the door out of the wooden panel.

Step 3: Replace the Flap

Follow the Option 1 steps above to replace the flap.

Maintenance Tips

- Clean the flap regularly with a soft cloth
- Check magnet alignment periodically
- Replace flap if worn or damaged to maintain performance

Your replacement flap is now installed and ready for use.